

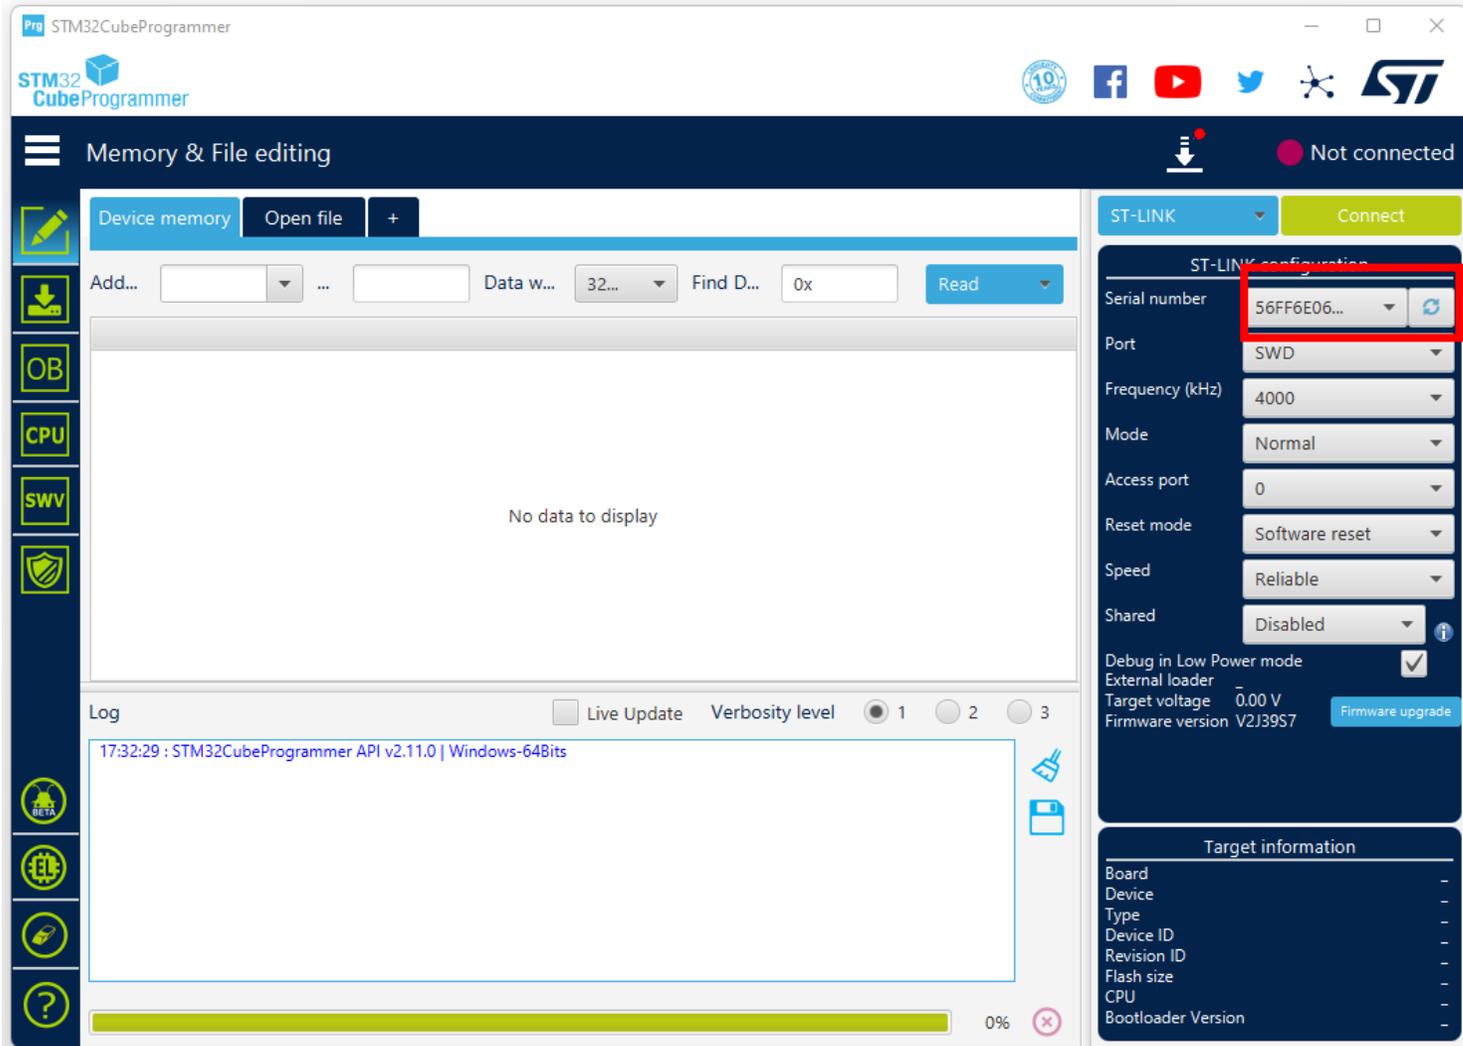


7SEMI ST-LINK Firmware upgrade using STM32CubeProgrammer


Step 1- Connect ST-LINK to System USB port .Serial number shows that ST-LINK is detected by STM32CubeProgrammer

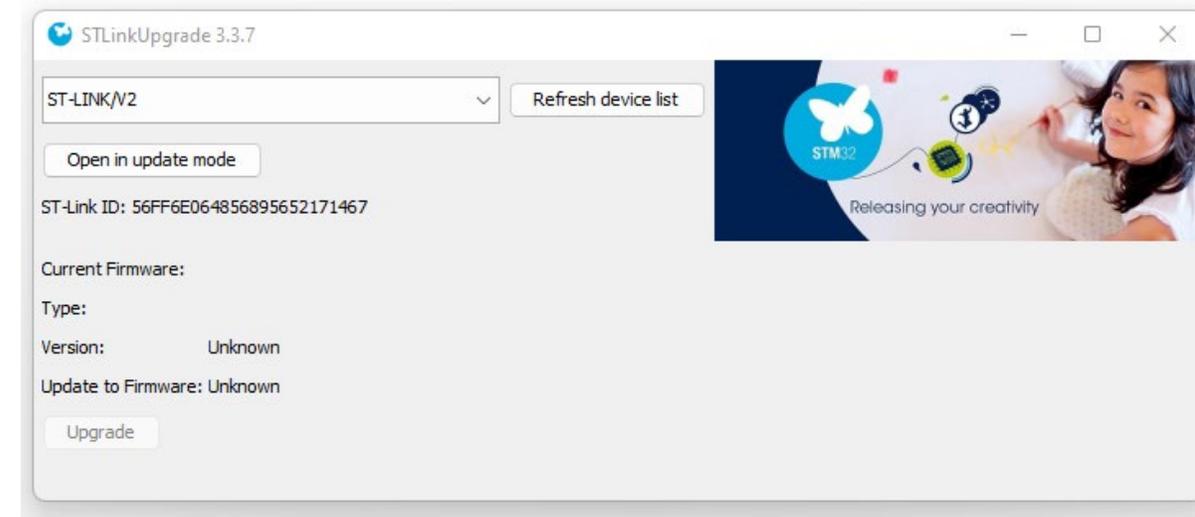


Step 2- Select Firmware upgrade button after that STLinkUpgrade window will appear.

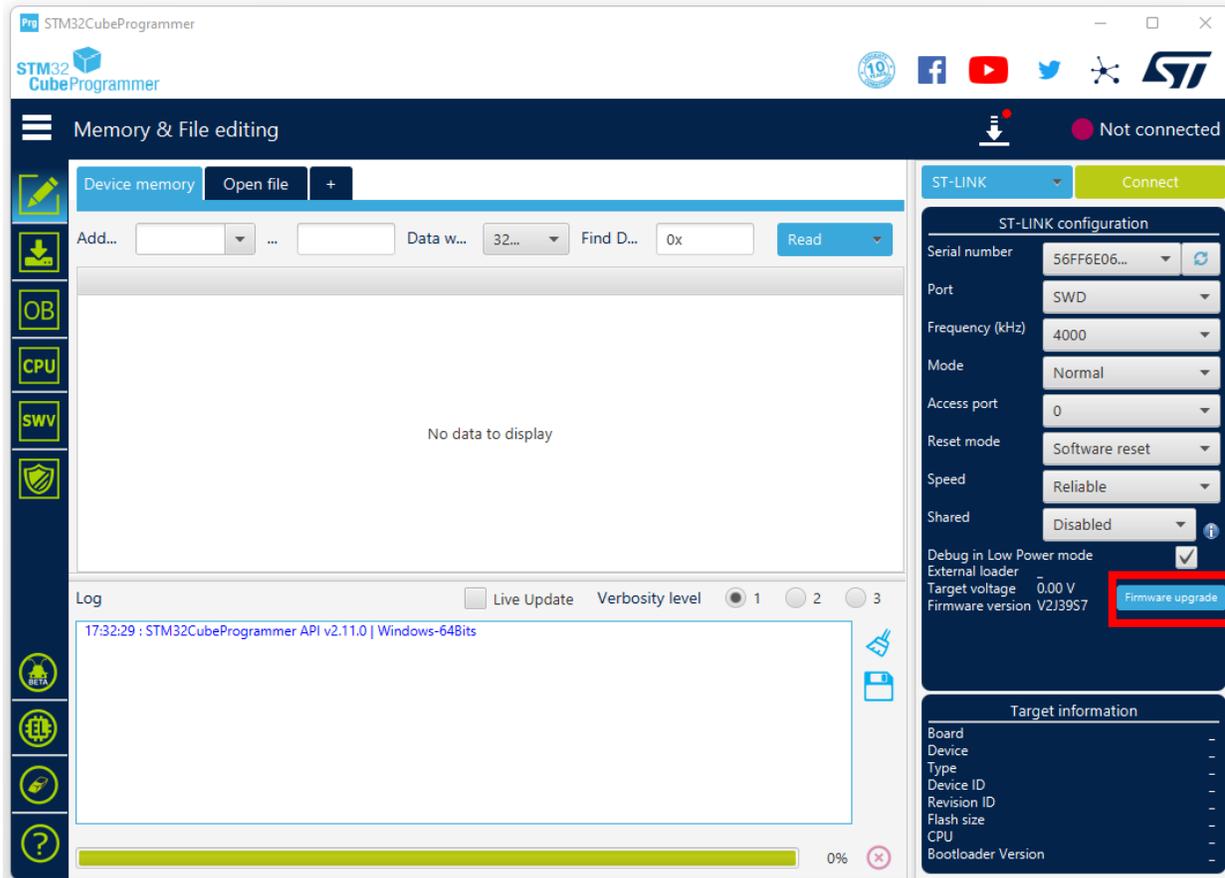


Step 3- STlinkUpgrade window will shows connected ST-LINK/V2 device.

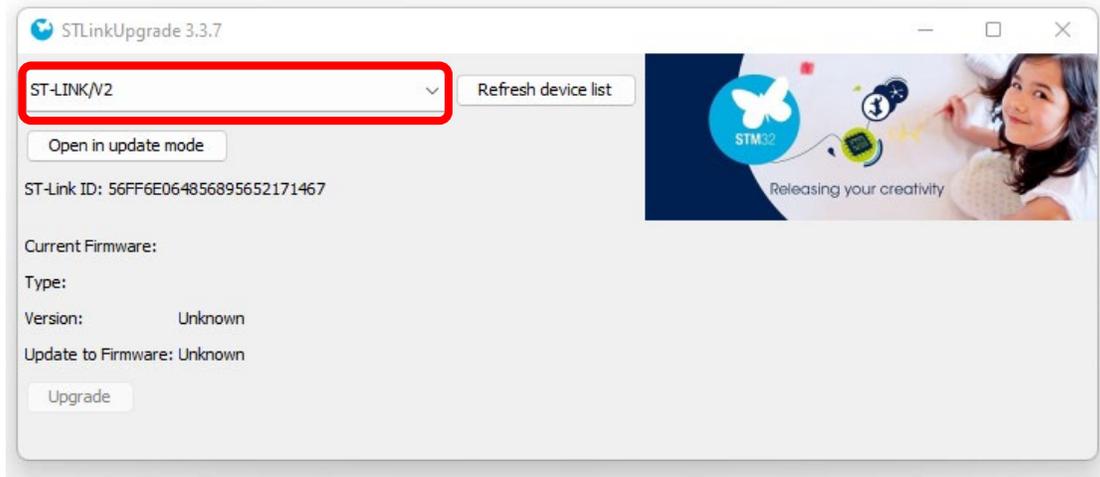

Step 4- Select **Open in update mode** in STlinkUpgrade window. After selection, current ST-LINK firmware details are fetched.

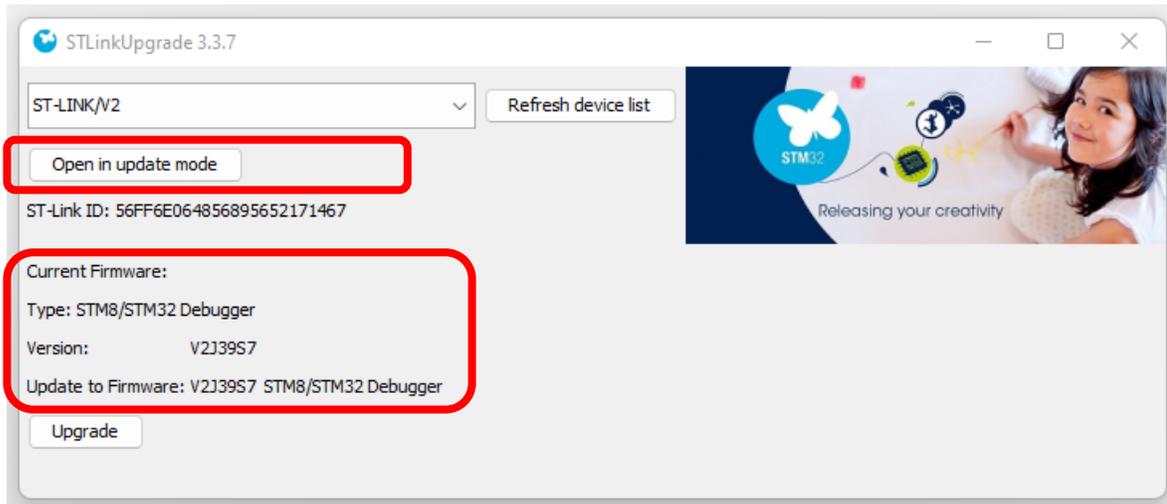

Step 5- Select **Upgrade** in STlinkUpgrade window.

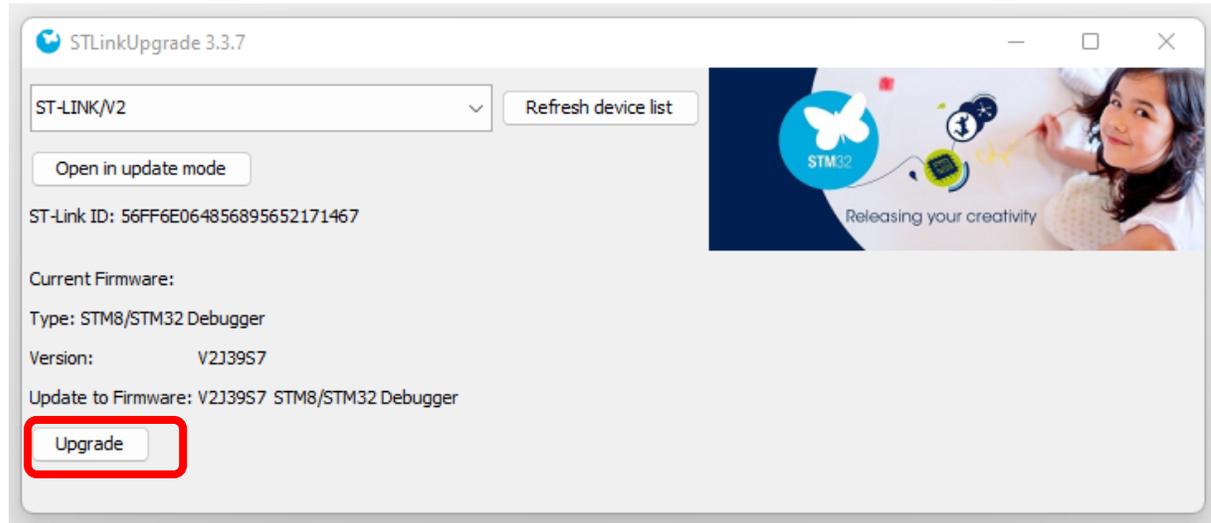

Step 6- After upgrade selection, upgradation process will be started and after successful completion Upgrade successful message will appear .

